


# Kenwood TM-D710G Quick Reference

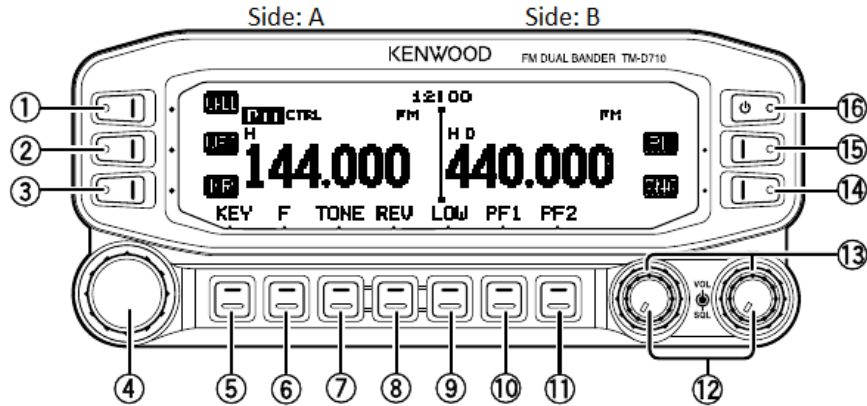

(pp. 8-9)

**(16) [Power]:** Press and hold to turn on and off.

**(12) [BAND SEL]:**

- Left and right volume and squelch controls Side A and Side B receivers respectively.
- To select a side to control or tx, press the left or right [BAND SEL]. Note where “PTT CTRL” is on the screen:



- Press and hold to switch to and from single band. (p.20)

**(4) [Tuning control]**

- Tunes the frequency or channel of the selected
- Press in VFO mode to select MHZ group to tune
- Press for 1s to scan frequencies or channels

**(2) [VFO] / (3) [MR]:**

- Select VFO or Memory Chanel mode.
- Hold to scan (same as holding (4) )

**(2) [VFO]:** on the fly “programming”:

To change band (Air, 2m, 440, 1200): (p.20)

- Press **(6) [F]** followed by
- the appropriate **(12) [BAND SEL]** button

Side A has: 118-136, 136-200, 400-524

Side B has: 136-200, 400-524, 800-1300

To add a tone:

- Press **(7) [TONE]** to activate the tone then
- Press **(6) [F]** followed by **(7) [T.SEL]**
- Then turn **(4) [Tuning Control]** to select the right tone.
- Then press **(4) [Tuning Control]** to save the selection.

To change tx power:

- Press **(9) [LOW]** to toggle L(5W), M (10W), H (50W)

To listen to the input of a repeater and transmit on its output:

- Press **(8) [REV]**

To change the control side without changing the PTT side: (p.19)

- Press **(11) [PF2]**